

PlcBooleanArray Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcBooleanArray](#) type exposes the following members.

Constructors

PlcBooleanArray(PlcBooleanArrayType)

Initializes a new instance of the [PlcBooleanArray](#) class using the specified [type](#).

C#

```
public PlcBooleanArray(PlcBooleanArrayType type)
```

Parameters

[type](#) [PlcBooleanArrayType](#)

The [PlcBooleanArrayType](#) of the new [PlcBooleanArray](#) to which the PLC array belongs.

Exceptions

[ArgumentNullException](#)

The [type](#) is a null reference (Nothing in Visual Basic).

PlcBooleanArray(PlcBooleanArrayType, Boolean[])

Initializes a new instance of the [PlcBooleanArray](#) class using the specified [type](#) and [values](#).

C#

```
public PlcBooleanArray(PlcBooleanArrayType type, params bool[] values)
```

Parameters

[type](#) [PlcBooleanArrayType](#)

The [PlcBooleanArrayType](#) of the new [PlcBooleanArray](#) to which the PLC array belongs.

[values](#) [Boolean\[\]](#)

The initial values of the new [PlcBooleanArray](#).

Exceptions

[ArgumentNullException](#)

The `type` is a null reference (Nothing in Visual Basic).

PlcBooleanArray(PlcBooleanArrayType, PlcName, Boolean[])

Initializes a new instance of the `PlcBooleanArray` class using the specified `type`, `name` and `values`.

C#

```
public PlcBooleanArray(PlcBooleanArrayType type, PlcName name, params bool[] values)
```

Parameters

`type` `PlcBooleanArrayType`

The `PlcBooleanArrayType` of the new `PlcBooleanArray` to which the PLC array belongs.

`name` `PlcName`

The name of the array represented.

`values` `Boolean[]`

The initial values of the new `PlcBooleanArray`.

Exceptions

`ArgumentNullException`

The `type` or `name` is a null reference (Nothing in Visual Basic).

PlcBooleanArray(PlcIdentity, Boolean[])

Initializes a new instance of the `PlcBooleanArray` class using the specified `identity` and `values`.

C#

```
public PlcBooleanArray(PlcIdentity identity, params bool[] values)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the new `PlcBooleanArray` to which the PLC array belongs.

`values` `Boolean[]`

The initial values of the new `PlcBooleanArray`.

Exceptions

`ArgumentException`

The **identity** does not refer to the Bit.

ArgumentNullException

The **identity** is a null reference (Nothing in Visual Basic).

PlcBooleanArray(PlcIdentity, Int32)

Initializes a new instance of the **PlcBooleanArray** class using the specified **identity** and **length**.

C#

```
public PlcBooleanArray(PlcIdentity identity, int length)
```

Parameters

identity PlcIdentity

The **PlcIdentity** of the new **PlcBooleanArray** to which the PLC array belongs.

length Int32

The array length used to store the array values of the **PlcBooleanArray**.

Exceptions

ArgumentException

The **identity** does not refer to the Bit.

ArgumentNullException

The **identity** is a null reference (Nothing in Visual Basic).

ArgumentOutOfRangeException

The **length** is out of the bounds defined by **MinLength** and **MaxLength**.

PlcBooleanArray(PlcIdentity, PlcName, Boolean[])

Initializes a new instance of the **PlcBooleanArray** class using the specified **identity**, **name** and **values**.

C#

```
public PlcBooleanArray(PlcIdentity identity, PlcName name, params bool[] values)
```

Parameters

identity PlcIdentity

The **PlcIdentity** of the new **PlcBooleanArray** to which the PLC array belongs.

name PlcName

The name of the array represented.

values Boolean[]

The initial values of the new [PlcBooleanArray](#).

Exceptions

[ArgumentException](#)

The **identity** does not refer to the [Bit](#).

[ArgumentNullException](#)

The **identity** or **name** is a null reference (Nothing in Visual Basic).

PlcBooleanArray(PlcIdentity, PlcName, Int32)

Initializes a new instance of the [PlcBooleanArray](#) class using the specified **identity**, **name** and **length**.

C#

```
public PlcBooleanArray(PlcIdentity identity, PlcName name, int length)
```

Parameters

identity PlcIdentity

The [PlcIdentity](#) of the new [PlcBooleanArray](#) to which the PLC array belongs.

name PlcName

The name of the array represented.

length Int32

The array length used to store the array values of the [PlcBooleanArray](#).

Exceptions

[ArgumentException](#)

The **identity** does not refer to the [Bit](#).

[ArgumentNullException](#)

The **identity** or **name** is a null reference (Nothing in Visual Basic).

[ArgumentOutOfRangeException](#)

The **length** is out of the bounds defined by [MinLength](#) and [MaxLength](#).

Methods

GetElementCore(Int32)

Retrieves the [PlcBoolean](#) at the specified index.

C#

```
protected override PlcBoolean GetElementCore(int index)
```

Parameters

`index Int32`

The zero-based index of the element to get.

Returns

[PlcBoolean](#)

The [PlcBoolean](#) at the specified index.

GetValueCore(PlcDeviceConnection)

Retrieves the current value of the PLC value from a [IPlcDevice](#) using the `connection` specified.

C#

```
protected override bool[] GetValueCore(PlcDeviceConnection connection)
```

Parameters

`connection PlcDeviceConnection`

The [PlcDeviceConnection](#) from that the data is to be retrieved.

Returns

`Boolean[]`

The current value of the PLC value.

Exceptions

[InvalidOperationException](#)

The `connection` is in [Faulted](#) state and cannot longer be opened.

[ObjectDisposedException](#)

The `connection` has been disposed of.

RelocateCore(PlcAddress)

Relocates the value to the **address** specified.

C#

```
protected override IPlcValue RelocateCore(PlcAddress address)
```

Parameters

address PlcAddress

The **PlcAddress** to that the value is to be relocated.

Returns

IPlcValue

A new instance of the same type as this PLC value instance relocated to the **address** specified.

SetValueCore(PlcDeviceConnection, Boolean[])

Stores the **value** in the **IPlcDevice** assigned to the **connection** specified.

C#

```
protected override void SetValueCore(PlcDeviceConnection connection, bool[] value)
```

Parameters

connection PlcDeviceConnection

The **PlcDeviceConnection** to use to store the **value**.

value Boolean[]

The value to be stored.

Exceptions

InvalidOperationException

The **connection** is in **Faulted** state and cannot longer be opened.

ObjectDisposedException

The **connection** has been disposed of.

Table of Contents

Constructors	1
PlcBooleanArray(PlcBooleanArrayType)	1
PlcBooleanArray(PlcBooleanArrayType, Boolean[])	1
PlcBooleanArray(PlcBooleanArrayType, PlcName, Boolean[])	2
PlcBooleanArray(PlcIdentity, Boolean[])	2
PlcBooleanArray(PlcIdentity, Int32)	3
PlcBooleanArray(PlcIdentity, PlcName, Boolean[])	3
PlcBooleanArray(PlcIdentity, PlcName, Int32)	4
Methods	4
GetElementCore(Int32)	5
GetValueCore(PlcDeviceConnection)	5
RelocateCore(PlcAddress)	6
SetValueCore(PlcDeviceConnection, Boolean[])	6

