

PlcByteArray Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcByteArray](#) type exposes the following members.

Constructors

PlcByteArray(PlcByteArrayType)

Initializes a new instance of the [PlcByteArray](#) class using the specified [type](#).

C#

```
public PlcByteArray(PlcByteArrayType type)
```

Parameters

[type](#) [PlcByteArrayType](#)

The [PlcByteArrayType](#) of the new [PlcByteArray](#) to which the PLC array belongs.

Exceptions

[ArgumentNullException](#)

The [type](#) is a null reference (Nothing in Visual Basic).

PlcByteArray(PlcByteArrayType, Byte[])

Initializes a new instance of the [PlcByteArray](#) class using the specified [type](#) and [values](#).

C#

```
public PlcByteArray(PlcByteArrayType type, params byte[] values)
```

Parameters

[type](#) [PlcByteArrayType](#)

The [PlcByteArrayType](#) of the new [PlcByteArray](#) to which the PLC array belongs.

[values](#) [Byte\[\]](#)

The initial values of the new [PlcByteArray](#).

Exceptions

[ArgumentNullException](#)

The `type` is a null reference (Nothing in Visual Basic).

PlcByteArray(PlcByteArrayType, PlcName, Byte[])

Initializes a new instance of the `PlcByteArray` class using the specified `type`, `name` and `values`.

C#

```
public PlcByteArray(PlcByteArrayType type, PlcName name, params byte[] values)
```

Parameters

`type` `PlcByteArrayType`

The `PlcByteArrayType` of the new `PlcByteArray` to which the PLC array belongs.

`name` `PlcName`

The name of the array represented.

`values` `Byte[]`

The initial values of the new `PlcByteArray`.

Exceptions

`ArgumentNullException`

The `type` or `name` is a null reference (Nothing in Visual Basic).

PlcByteArray(PlcIdentity, Byte[])

Initializes a new instance of the `PlcByteArray` class using the specified `identity` and `values`.

C#

```
public PlcByteArray(PlcIdentity identity, params byte[] values)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the new `PlcByteArray` to which the PLC array belongs.

`values` `Byte[]`

The initial values of the new `PlcByteArray`.

Exceptions

`ArgumentException`

The `identity` does not refer to the `Byte`.

ArgumentNullException

The `identity` is a null reference (Nothing in Visual Basic).

PlcByteArray(PlcIdentity, Int32)

Initializes a new instance of the `PlcByteArray` class using the specified `identity` and `length`.

C#

```
public PlcByteArray(PlcIdentity identity, int length)
```

Parameters

identity PlcIdentity

The `PlcIdentity` of the new `PlcByteArray` to which the PLC array belongs.

length Int32

The array length used to store the array values of the `PlcByteArray`.

Exceptions

ArgumentException

The `identity` does not refer to the `Byte`.

ArgumentNullException

The `identity` is a null reference (Nothing in Visual Basic).

ArgumentOutOfRangeException

The `length` is out of the bounds defined by `MinLength` and `MaxLength`.

PlcByteArray(PlcIdentity, PlcName, Byte[])

Initializes a new instance of the `PlcByteArray` class using the specified `identity`, `name` and `values`.

C#

```
public PlcByteArray(PlcIdentity identity, PlcName name, params byte[] values)
```

Parameters

identity PlcIdentity

The `PlcIdentity` of the new `PlcByteArray` to which the PLC array belongs.

name PlcName

The name of the array represented.

values Byte[]

The initial values of the new [PlcByteArray](#).

Exceptions

ArgumentException

The `identity` does not refer to the `Byte`.

ArgumentNullException

The `identity` or `name` is a null reference (Nothing in Visual Basic).

PlcByteArray(PlcIdentity, PlcName, Int32)

Initializes a new instance of the [PlcByteArray](#) class using the specified `identity`, `name` and `length`.

C#

```
public PlcByteArray(PlcIdentity identity, PlcName name, int length)
```

Parameters

identity PlcIdentity

The [PlcIdentity](#) of the new [PlcByteArray](#) to which the PLC array belongs.

name PlcName

The name of the array represented.

length Int32

The array length used to store the array values of the [PlcByteArray](#).

Exceptions

ArgumentException

The `identity` does not refer to the `Byte`.

ArgumentNullException

The `identity` or `name` is a null reference (Nothing in Visual Basic).

ArgumentOutOfRangeException

The `length` is out of the bounds defined by `MinLength` and `MaxLength`.

Methods

GetElementCore(Int32)

Retrieves the [PlcByte](#) at the specified index.

C#

```
protected override PlcByte GetElementCore(int index)
```

Parameters

`index` Int32

The zero-based index of the element to get.

Returns

PlcByte

The `PlcByte` at the specified index.

GetValueCore(PlcDeviceConnection)

Retrieves the current value of the PLC value from a `IPlcDevice` using the `connection` specified.

C#

```
protected override byte[] GetValueCore(PlcDeviceConnection connection)
```

Parameters

`connection` PlcDeviceConnection

The `PlcDeviceConnection` from that the data is to be retrieved.

Returns

Byte[]

The current value of the PLC value.

Exceptions

`InvalidOperationException`

The `connection` is in `Faulted` state and cannot longer be opened.

`ObjectDisposedException`

The `connection` has been disposed of.

RelocateCore(PlcAddress)

Relocates the value to the `address` specified.

C#

```
protected override IPlcValue RelocateCore(PlcAddress address)
```

Parameters

address PlcAddress

The PlcAddress to that the value is to be relocated.

Returns

IPlcValue

A new instance of the same type as this PLC value instance relocated to the **address** specified.

SetValueCore(PlcDeviceConnection, Byte[])

Stores the **value** in the **IPlcDevice** assigned to the **connection** specified.

C#

```
protected override void SetValueCore(PlcDeviceConnection connection, byte[] value)
```

Parameters

connection PlcDeviceConnection

The PlcDeviceConnection to use to store the **value**.

value Byte[]

The value to be stored.

Exceptions

InvalidOperationException

The **connection** is in **Faulted** state and cannot longer be opened.

ObjectDisposedException

The **connection** has been disposed of.

Table of Contents

Constructors	1
PlcByteArray(PlcByteArrayType)	1
PlcByteArray(PlcByteArrayType, Byte[])	1
PlcByteArray(PlcByteArrayType, PlcName, Byte[])	2
PlcByteArray(PlcIdentity, Byte[])	2
PlcByteArray(PlcIdentity, Int32)	3
PlcByteArray(PlcIdentity, PlcName, Byte[])	3
PlcByteArray(PlcIdentity, PlcName, Int32)	4
Methods	4
GetElementCore(Int32)	4
GetValueCore(PlcDeviceConnection)	5
RelocateCore(PlcAddress)	5
SetValueCore(PlcDeviceConnection, Byte[])	6

