

PlcByteInfo Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcByteInfo](#) type exposes the following members.

Constructors

PlcByteInfo(PlcByteType, PlcName)

Initializes a new instance of the [PlcByteInfo](#) class using the specified **type** and **name**.

C#

```
public PlcByteInfo(PlcByteType type, PlcName name)
```

Parameters

type [PlcByteType](#)

The type of value member.

name [PlcName](#)

The name of the value member.

Exceptions

[ArgumentNullException](#)

The **type** or **name** is a null reference (Nothing in Visual Basic).

PlcByteInfo(PlcByteType, PlcName, Byte)

Initializes a new instance of the [PlcByteInfo](#) class using the specified **type**, **name** and **initialValue**.

C#

```
public PlcByteInfo(PlcByteType type, PlcName name, byte initialValue)
```

Parameters

type [PlcByteType](#)

The type of value member.

name [PlcName](#)

The name of the value member.

initialValue [Byte](#)

The initial value of the new `PlcByteInfo`.

Exceptions

`ArgumentNullException`

The `type` or `name` is a null reference (Nothing in Visual Basic).

`PlcByteInfo(PlcIdentity, PlcName)`

Initializes a new instance of the `PlcByteInfo` class using the specified `identity` and `name`.

C#

```
public PlcByteInfo(PlcIdentity identity, PlcName name)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the type of value member.

`name` `PlcName`

The name of the value member.

Exceptions

`ArgumentException`

The `identity` does not refer to the `Byte`.

`ArgumentNullException`

The `identity` or `name` is a null reference (Nothing in Visual Basic).

`PlcByteInfo(PlcIdentity, PlcName, Byte)`

Initializes a new instance of the `PlcByteInfo` class using the specified `identity`, `name` and `initialValue`.

C#

```
public PlcByteInfo(PlcIdentity identity, PlcName name, byte initialValue)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the type of value member.

`name` `PlcName`

The name of the value member.

`initialValue` `Byte`

The initial value of the new `PlcByteInfo`.

Exceptions

`ArgumentException`

The `identity` does not refer to the `Byte`.

`ArgumentNullException`

The `identity`, or `name` is a null reference (Nothing in Visual Basic).

PlcByteInfo(PlcName)

Initializes a new instance of the `PlcByteInfo` class using the specified `name`

C#

```
public PlcByteInfo(PlcName name)
```

Parameters

`name` `PlcName`

The name of the value member.

Exceptions

`ArgumentNullException`

The `name` is a null reference (Nothing in Visual Basic).

PlcByteInfo(PlcName, Byte)

Initializes a new instance of the `PlcByteInfo` class using the specified `name` and `initialValue`.

C#

```
public PlcByteInfo(PlcName name, byte initialValue)
```

Parameters

`name` `PlcName`

The name of the value member.

`initialValue` `Byte`

The initial value of the new `PlcByteInfo`.

Exceptions

ArgumentNullException

The `name` is a null reference (Nothing in Visual Basic).

Methods

MakeAbsoluteMember(PlcIdentity)

Retrieves the [PlcByteInfo](#) as an absolute addressable PLC data member.

C#

```
public override IPlcMemberInfo MakeAbsoluteMember(PlcIdentity identity)
```

Parameters

`identity` [PlcIdentity](#)

The [PlcIdentity](#) to use to define the absolute location. This identity is used to define the basis starting from that the member is located.

Returns

[IPlcMemberInfo](#)

In case there `IsAbsolute` is equals true the reference to this member; otherwise a new instance of the member which refers to an absolute [PlcType](#).

Exceptions

[ArgumentException](#)

The `identity` specified does not provide the necessary information required to address the type of data.

[ArgumentNullException](#)

The `identity` is a null reference (Nothing in Visual Basic).

RelocateCore(PlcType)

Relocates the member to the `type` specified.

C#

```
protected override PlcMemberInfo RelocateCore(PlcType type)
```

Parameters

`type` [PlcType](#)

The [PlcType](#) to that the member is to be relocated.

Returns

[PlcMemberInfo](#)

A new instance of the same type as this PLC member instance relocated to the [type](#) specified.

Table of Contents

Constructors	1
PlcByteInfo(PlcByteType, PlcName)	1
PlcByteInfo(PlcByteType, PlcName, Byte)	1
PlcByteInfo(PlcIdentity, PlcName)	2
PlcByteInfo(PlcIdentity, PlcName, Byte)	2
PlcByteInfo(PlcName)	3
PlcByteInfo(PlcName, Byte)	3
Methods	4
MakeAbsoluteMember(PlcIdentity)	4
RelocateCore(PlcType)	4