

PlcDoubleInfo Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcDoubleInfo](#) type exposes the following members.

Constructors

PlcDoubleInfo(PlcDoubleType, PlcName)

Initializes a new instance of the [PlcDoubleInfo](#) class using the specified **type** and **name**.

C#

```
public PlcDoubleInfo(PlcDoubleType type, PlcName name)
```

Parameters

type [PlcDoubleType](#)

The type of value member.

name [PlcName](#)

The name of the value member.

Exceptions

[ArgumentNullException](#)

The **type** or **name** is a null reference (Nothing in Visual Basic).

PlcDoubleInfo(PlcDoubleType, PlcName, Double)

Initializes a new instance of the [PlcDoubleInfo](#) class using the specified **type**, **name** and **initialValue**.

C#

```
public PlcDoubleInfo(PlcDoubleType type, PlcName name, double initialValue)
```

Parameters

type [PlcDoubleType](#)

The type of value member.

name [PlcName](#)

The name of the value member.

initialValue [Double](#)

The initial value of the new `PlcDoubleInfo`.

Exceptions

ArgumentNullException

The `type` or `name` is a null reference (Nothing in Visual Basic).

PlcDoubleInfo(PlcIdentity, PlcName)

Initializes a new instance of the `PlcDoubleInfo` class using the specified `identity` and `name`.

C#

```
public PlcDoubleInfo(PlcIdentity identity, PlcName name)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the type of value member.

`name` `PlcName`

The name of the value member.

Exceptions

ArgumentException

The `identity` does not refer to the `DWord`.

ArgumentNullException

The `identity` or `name` is a null reference (Nothing in Visual Basic).

PlcDoubleInfo(PlcIdentity, PlcName, Double)

Initializes a new instance of the `PlcDoubleInfo` class using the specified `identity`, `name` and `initialValue`.

C#

```
public PlcDoubleInfo(PlcIdentity identity, PlcName name, double initialValue)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the type of value member.

`name` `PlcName`

The name of the value member.

initialValue Double

The initial value of the new **PlcDoubleInfo**.

Exceptions

ArgumentException

The **identity** does not refer to the **DWord**.

ArgumentNullException

The **identity**, or **name** is a null reference (Nothing in Visual Basic).

PlcDoubleInfo(PlcName)

Initializes a new instance of the **PlcDoubleInfo** class using the specified **name**

C#

```
public PlcDoubleInfo(PlcName name)
```

Parameters

name PlcName

The name of the value member.

Exceptions

ArgumentNullException

The **name** is a null reference (Nothing in Visual Basic).

PlcDoubleInfo(PlcName, Double)

Initializes a new instance of the **PlcDoubleInfo** class using the specified **name** and **initialValue**.

C#

```
public PlcDoubleInfo(PlcName name, double initialValue)
```

Parameters

name PlcName

The name of the value member.

initialValue Double

The initial value of the new **PlcDoubleInfo**.

Exceptions

ArgumentNullException

The `name` is a null reference (Nothing in Visual Basic).

Methods

MakeAbsoluteMember(PlcIdentity)

Retrieves the `PlcDoubleInfo` as an absolute addressable PLC data member.

C#

```
public override IPlcMemberInfo MakeAbsoluteMember(PlcIdentity identity)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` to use to define the absolute location. This identity is used to define the basis starting from that the member is located.

Returns

`IPlcMemberInfo`

In case there `IsAbsolute` is equals true the reference to this member; otherwise a new instance of the member which refers to an absolute `PlcType`.

Exceptions

`ArgumentException`

The `identity` specified does not provide the necessary information required to address the type of data.

`ArgumentNullException`

The `identity` is a null reference (Nothing in Visual Basic).

RelocateCore(PlcType)

Relocates the member to the `type` specified.

C#

```
protected override PlcMemberInfo RelocateCore(PlcType type)
```

Parameters

`type` `PlcType`

The **PlcType** to that the member is to be relocated.

Returns

PlcMemberInfo

A new instance of the same type as this PLC member instance relocated to the **type** specified.

Table of Contents

Constructors	1
PlcDoubleInfo(PlcDoubleType, PlcName)	1
PlcDoubleInfo(PlcDoubleType, PlcName, Double)	1
PlcDoubleInfo(PlcIdentity, PlcName)	2
PlcDoubleInfo(PlcIdentity, PlcName, Double)	2
PlcDoubleInfo(PlcName)	3
PlcDoubleInfo(PlcName, Double)	3
Methods	4
MakeAbsoluteMember(PlcIdentity)	4
RelocateCore(PlcType)	4