

PlcInt32Array Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcInt32Array](#) type exposes the following members.

Constructors

PlcInt32Array(PlcIdentity, Int32)

Initializes a new instance of the [PlcInt32Array](#) class using the specified [identity](#) and [length](#).

C#

```
public PlcInt32Array(PlcIdentity identity, int length)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcInt32Array](#) to which the PLC array belongs.

[length](#) [Int32](#)

The array length used to store the array values of the [PlcInt32Array](#).

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [DWord](#).

[ArgumentNullException](#)

The [identity](#) is a null reference (Nothing in Visual Basic).

[ArgumentOutOfRangeException](#)

The [length](#) is out of the bounds defined by [MinLength](#) and [MaxLength](#).

PlcInt32Array(PlcIdentity, Int32[])

Initializes a new instance of the [PlcInt32Array](#) class using the specified [identity](#) and [values](#).

C#

```
public PlcInt32Array(PlcIdentity identity, params int[] values)
```

Parameters

[identity](#) [PlcIdentity](#)

The `PlcIdentity` of the new `PlcInt32Array` to which the PLC array belongs.

`values Int32[]`

The initial values of the new `PlcInt32Array`.

Exceptions

`ArgumentException`

The `identity` does not refer to the `DWord`.

`ArgumentNullException`

The `identity` is a null reference (Nothing in Visual Basic).

PlcInt32Array(PlcIdentity, PlcName, Int32)

Initializes a new instance of the `PlcInt32Array` class using the specified `identity`, `name` and `length`.

C#

```
public PlcInt32Array(PlcIdentity identity, PlcName name, int length)
```

Parameters

`identity` `PlcIdentity`

The `PlcIdentity` of the new `PlcInt32Array` to which the PLC array belongs.

`name` `PlcName`

The name of the array represented.

`length` `Int32`

The array length used to store the array values of the `PlcInt32Array`.

Exceptions

`ArgumentException`

The `identity` does not refer to the `DWord`.

`ArgumentNullException`

The `identity` or `name` is a null reference (Nothing in Visual Basic).

`ArgumentOutOfRangeException`

The `length` is out of the bounds defined by `MinLength` and `MaxLength`.

PlcInt32Array(PlcIdentity, PlcName, Int32[])

Initializes a new instance of the `PlcInt32Array` class using the specified `identity`, `name` and `values`.

C#

```
public PlcInt32Array(PlcIdentity identity, PlcName name, params int[] values)
```

Parameters

identity [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcInt32Array](#) to which the PLC array belongs.

name [PlcName](#)

The name of the array represented.

values [Int32\[\]](#)

The initial values of the new [PlcInt32Array](#).

Exceptions

[ArgumentException](#)

The **identity** does not refer to the [DWord](#).

[ArgumentNullException](#)

The **identity** or **name** is a null reference (Nothing in Visual Basic).

PlcInt32Array(PlcInt32ArrayType)

Initializes a new instance of the [PlcInt32Array](#) class using the specified **type**.

C#

```
public PlcInt32Array(PlcInt32ArrayType type)
```

Parameters

type [PlcInt32ArrayType](#)

The [PlcInt32ArrayType](#) of the new [PlcInt32Array](#) to which the PLC array belongs.

Exceptions

[ArgumentNullException](#)

The **type** is a null reference (Nothing in Visual Basic).

PlcInt32Array(PlcInt32ArrayType, Int32[])

Initializes a new instance of the [PlcInt32Array](#) class using the specified **type** and **values**.

C#

```
public PlcInt32Array(PlcInt32ArrayType type, params int[] values)
```

Parameters

type [PlcInt32ArrayType](#)

The [PlcInt32ArrayType](#) of the new [PlcInt32Array](#) to which the PLC array belongs.

values [Int32\[\]](#)

The initial values of the new [PlcInt32Array](#).

Exceptions

[ArgumentNullException](#)

The **type** is a null reference (Nothing in Visual Basic).

PlcInt32Array(PlcInt32ArrayType, PlcName, Int32[])

Initializes a new instance of the [PlcInt32Array](#) class using the specified **type**, **name** and **values**.

C#

```
public PlcInt32Array(PlcInt32ArrayType type, PlcName name, params int[] values)
```

Parameters

type [PlcInt32ArrayType](#)

The [PlcInt32ArrayType](#) of the new [PlcInt32Array](#) to which the PLC array belongs.

name [PlcName](#)

The name of the array represented.

values [Int32\[\]](#)

The initial values of the new [PlcInt32Array](#).

Exceptions

[ArgumentNullException](#)

The **type** or **name** is a null reference (Nothing in Visual Basic).

Methods

GetElementCore(Int32)

Retrieves the [PlcInt32](#) at the specified index.

C#

```
protected override PlcInt32 GetElementCore(int index)
```

Parameters

index [Int32](#)

The zero-based index of the element to get.

Returns

[PlcInt32](#)

The [PlcInt32](#) at the specified index.

GetValueCore(PlcDeviceConnection)

Retrieves the current value of the PLC value from a [IPlcDevice](#) using the **connection** specified.

C#

```
protected override int[] GetValueCore(PlcDeviceConnection connection)
```

Parameters

connection [PlcDeviceConnection](#)

The [PlcDeviceConnection](#) from that the data is to be retrieved.

Returns

[Int32\[\]](#)

The current value of the PLC value.

Exceptions

[InvalidOperationException](#)

The **connection** is in [Faulted](#) state and cannot longer be opened.

[ObjectDisposedException](#)

The **connection** has been disposed of.

RelocateCore(PlcAddress)

Relocates the value to the **address** specified.

C#

```
protected override IPlcValue RelocateCore(PlcAddress address)
```

Parameters

address PlcAddress

The PlcAddress to that the value is to be relocated.

Returns

IPlcValue

A new instance of the same type as this PLC value instance relocated to the **address** specified.

SetValueCore(PlcDeviceConnection, Int32[])

Stores the **value** in the IPlcDevice assigned to the **connection** specified.

C#

```
protected override void SetValueCore(PlcDeviceConnection connection, int[] value)
```

Parameters

connection PlcDeviceConnection

The PlcDeviceConnection to use to store the **value**.

value Int32[]

The value to be stored.

Exceptions

InvalidOperationException

The **connection** is in Faulted state and cannot longer be opened.

ObjectDisposedException

The **connection** has been disposed of.

Table of Contents

Constructors	1
PlcInt32Array(PlcIdentity, Int32)	1
PlcInt32Array(PlcIdentity, Int32[])	1
PlcInt32Array(PlcIdentity, PlcName, Int32)	2
PlcInt32Array(PlcIdentity, PlcName, Int32[])	2
PlcInt32Array(PlcInt32ArrayType)	3
PlcInt32Array(PlcInt32ArrayType, Int32[])	3
PlcInt32Array(PlcInt32ArrayType, PlcName, Int32[])	4
Methods	4
GetElementCore(Int32)	4
GetValueCore(PlcDeviceConnection)	5
RelocateCore(PlcAddress)	5
SetValueCore(PlcDeviceConnection, Int32[])	6

