

PlcLReal Class

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll

Represents a [Double](#) value (in PLC a LREAL) its value defines a double-precision floating-point number.

C#

```
public class PlcLReal : PlcValue<double>, IPlcValue<double>, IPlcValue, IPlcSymbol,
    IPlcEntity, IPlcStatusProvider, IPlcRelocatable<IPlcValue>, IPlcRelocatable,
    ISupportInitialize
```

Inheritance [Object](#) > [PlcValue<Double>](#) > [PlcLReal](#)

Implements [IPlcValue<Double>](#), [IPlcValue](#), [IPlcSymbol](#), [IPlcEntity](#), [IPlcStatusProvider](#), [IPlcRelocatable<IPlcValue>](#), [IPlcRelocatable](#), [ISupportInitialize](#)

Remarks

While a PLC value of this type represents a [Double](#) value, all PLC operations performed using this class are done using the [LWord](#). A PLC developer knows a value of this type as LREAL.

Constructors

Name	Description
PlcLReal(PlcIdentity)	Initializes a new instance of the PlcLReal class using the specified identity
PlcLReal(PlcIdentity, Double)	Initializes a new instance of the PlcLReal class using the specified identity and value .
PlcLReal(PlcIdentity, PlcName)	Initializes a new instance of the PlcLReal class using the specified identity and name .
PlcLReal(PlcIdentity, PlcName, Double)	Initializes a new instance of the PlcLReal class using the specified identity , name and value .
PlcLReal(PlcLRealType)	Initializes a new instance of the PlcLReal class using the specified type
PlcLReal(PlcLRealType, Double)	Initializes a new instance of the PlcLReal class using the specified type and value .
PlcLReal(PlcLRealType, PlcName)	Initializes a new instance of the PlcLReal class using the specified type and name .
PlcLReal(PlcLRealType, PlcName, Double)	Initializes a new instance of the PlcLReal class using the specified type , name and value .

Methods

Name	Description
GetValueCore(PlcDeviceConnection)	Retrieves the current value of the PLC value from a IPlcDevice using the connection specified.

Name	Description
RelocateCore(PlcAddress)	Relocates the value to the address specified.
SetValueCore(PlcDeviceConnection, Double)	Stores the value in the IPlcDevice assigned to the connection specified.

Table of Contents

Remarks	1
Constructors	1
Methods	1

