

PlcMemberChangedEventArgs

Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcMemberChangedEventArgs](#) type exposes the following members.

Constructors

PlcMemberChangedEventArgs(PlcMember, Object, Object)

Initializes a new instance of the [PlcMemberChangedEventArgs](#) class using the [member](#), [oldValue](#) and [newValue](#) specified.

C#

```
public PlcMemberChangedEventArgs(PlcMember member, object oldValue, object newValue)
```

Parameters

[member](#) [PlcMember](#)

The [PlcMember](#) that has been changed.

[oldValue](#) [Object](#)

The old value before [newValue](#) has been applied.

[newValue](#) [Object](#)

The new value which substitutes the [oldValue](#).

Exceptions

[ArgumentNullException](#)

The [member](#) is a null reference (Nothing in Visual Basic).

Properties

Member

Gets the member that has been changed.

C#

```
public PlcMember Member { get; }
```

Property Value

[PlcMember](#)

The [PlcMember](#) affected by the change.

Table of Contents

Constructors	1
PlcMemberChangedEventArgs(PlcMember, Object, Object)	1
Properties	1
Member	1

