

PlcUInt64Array Members

Namespace: IPS7Lnk.Advanced

Assemblies: IPS7LnkNet.Advanced.dll, IPS7LnkNet.Advanced.dll

The [PlcUInt64Array](#) type exposes the following members.

Constructors

PlcUInt64Array(PlcIdentity, Int32)

Initializes a new instance of the [PlcUInt64Array](#) class using the specified [identity](#) and [length](#).

C#

```
public PlcUInt64Array(PlcIdentity identity, int length)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcUInt64Array](#) to which the PLC array belongs.

[length](#) [Int32](#)

The array length used to store the array values of the [PlcUInt64Array](#).

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [LWord](#).

[ArgumentNullException](#)

The [identity](#) is a null reference (Nothing in Visual Basic).

[ArgumentOutOfRangeException](#)

The [length](#) is out of the bounds defined by [MinLength](#) and [MaxLength](#).

PlcUInt64Array(PlcIdentity, PlcName, Int32)

Initializes a new instance of the [PlcUInt64Array](#) class using the specified [identity](#), [name](#) and [length](#).

C#

```
public PlcUInt64Array(PlcIdentity identity, PlcName name, int length)
```

Parameters

[identity](#) [PlcIdentity](#)

The `PlcIdentity` of the new `PlcUInt64Array` to which the PLC array belongs.

`name PlcName`

The name of the array represented.

`length Int32`

The array length used to store the array values of the `PlcUInt64Array`.

Exceptions

`ArgumentException`

The `identity` does not refer to the `LWord`.

`ArgumentNullException`

The `identity` or `name` is a null reference (Nothing in Visual Basic).

`ArgumentOutOfRangeException`

The `length` is out of the bounds defined by `MinLength` and `MaxLength`.

PlcUInt64Array(PlcIdentity, PlcName, UInt64[])

Initializes a new instance of the `PlcUInt64Array` class using the specified `identity`, `name` and `values`.

C#

```
public PlcUInt64Array(PlcIdentity identity, PlcName name, params ulong[] values)
```

Parameters

`identity PlcIdentity`

The `PlcIdentity` of the new `PlcUInt64Array` to which the PLC array belongs.

`name PlcName`

The name of the array represented.

`values UInt64[]`

The initial values of the new `PlcUInt64Array`.

Exceptions

`ArgumentException`

The `identity` does not refer to the `LWord`.

`ArgumentNullException`

The `identity` or `name` is a null reference (Nothing in Visual Basic).

PlcUInt64Array(PlcIdentity, UInt64[])

Initializes a new instance of the [PlcUInt64Array](#) class using the specified [identity](#) and [values](#).

C#

```
public PlcUInt64Array(PlcIdentity identity, params ulong[] values)
```

Parameters

[identity](#) [PlcIdentity](#)

The [PlcIdentity](#) of the new [PlcUInt64Array](#) to which the PLC array belongs.

[values](#) [UInt64\[\]](#)

The initial values of the new [PlcUInt64Array](#).

Exceptions

[ArgumentException](#)

The [identity](#) does not refer to the [LWord](#).

[ArgumentNullException](#)

The [identity](#) is a null reference (Nothing in Visual Basic).

PlcUInt64Array(PlcUInt64ArrayType)

Initializes a new instance of the [PlcUInt64Array](#) class using the specified [type](#).

C#

```
public PlcUInt64Array(PlcUInt64ArrayType type)
```

Parameters

[type](#) [PlcUInt64ArrayType](#)

The [PlcUInt64ArrayType](#) of the new [PlcUInt64Array](#) to which the PLC array belongs.

Exceptions

[ArgumentNullException](#)

The [type](#) is a null reference (Nothing in Visual Basic).

PlcUInt64Array(PlcUInt64ArrayType, PlcName, UInt64[])

Initializes a new instance of the [PlcUInt64Array](#) class using the specified [type](#), [name](#) and [values](#).

C#

```
public PlcUInt64Array(PlcUInt64ArrayType type, PlcName name, params ulong[] values)
```

Parameters

type [PlcUInt64ArrayType](#)

The [PlcUInt64ArrayType](#) of the new [PlcUInt64Array](#) to which the PLC array belongs.

name [PlcName](#)

The name of the array represented.

values [UInt64\[\]](#)

The initial values of the new [PlcUInt64Array](#).

Exceptions

[ArgumentNullException](#)

The **type** or **name** is a null reference (Nothing in Visual Basic).

PlcUInt64Array(PlcUInt64ArrayType, UInt64[])

Initializes a new instance of the [PlcUInt64Array](#) class using the specified **type** and **values**.

C#

```
public PlcUInt64Array(PlcUInt64ArrayType type, params ulong[] values)
```

Parameters

type [PlcUInt64ArrayType](#)

The [PlcUInt64ArrayType](#) of the new [PlcUInt64Array](#) to which the PLC array belongs.

values [UInt64\[\]](#)

The initial values of the new [PlcUInt64Array](#).

Exceptions

[ArgumentNullException](#)

The **type** is a null reference (Nothing in Visual Basic).

Methods

GetElementCore(Int32)

Retrieves the [PlcUInt64](#) at the specified index.

C#

```
protected override PlcUInt64 GetElementCore(int index)
```

Parameters

index [Int32](#)

The zero-based index of the element to get.

Returns

[PlcUInt64](#)

The [PlcUInt64](#) at the specified index.

GetValueCore(PlcDeviceConnection)

Retrieves the current value of the PLC value from a [IPlcDevice](#) using the **connection** specified.

C#

```
protected override ulong[] GetValueCore(PlcDeviceConnection connection)
```

Parameters

connection [PlcDeviceConnection](#)

The [PlcDeviceConnection](#) from that the data is to be retrieved.

Returns

[UInt64\[\]](#)

The current value of the PLC value.

Exceptions

[InvalidOperationException](#)

The **connection** is in [Faulted](#) state and cannot longer be opened.

[ObjectDisposedException](#)

The **connection** has been disposed of.

RelocateCore(PlcAddress)

Relocates the value to the **address** specified.

C#

```
protected override IPlcValue RelocateCore(PlcAddress address)
```

Parameters

address PlcAddress

The **PlcAddress** to that the value is to be relocated.

Returns

IPlcValue

A new instance of the same type as this PLC value instance relocated to the **address** specified.

SetValueCore(PlcDeviceConnection, UInt64[])

Stores the **value** in the **IPlcDevice** assigned to the **connection** specified.

C#

```
protected override void SetValueCore(PlcDeviceConnection connection, ulong[] value)
```

Parameters

connection PlcDeviceConnection

The **PlcDeviceConnection** to use to store the **value**.

value UInt64[]

The value to be stored.

Exceptions

InvalidOperationException

The **connection** is in **Faulted** state and cannot longer be opened.

ObjectDisposedException

The **connection** has been disposed of.

Table of Contents

Constructors	1
PlcUInt64Array(PlcIdentity, Int32)	1
PlcUInt64Array(PlcIdentity, PlcName, Int32)	1
PlcUInt64Array(PlcIdentity, PlcName, UInt64[])	2
PlcUInt64Array(PlcIdentity, UInt64[])	3
PlcUInt64Array(PlcUInt64ArrayType)	3
PlcUInt64Array(PlcUInt64ArrayType, PlcName, UInt64[])	3
PlcUInt64Array(PlcUInt64ArrayType, UInt64[])	4
Methods	4
GetElementCore(Int32)	4
GetValueCore(PlcDeviceConnection)	5
RelocateCore(PlcAddress)	5
SetValueCore(PlcDeviceConnection, UInt64[])	6

